



## **Valley Tent Rental L.L.C.**

**WWW.VALLEYTENT.COM \* (201)-476-5666**

### **COTTON CANDY MACHINE**

#### **OPERATING INSTRUCTIONS**

- 1. If you have the Lock-N-Go handles on the sides, prior to operation, rotate both Lock-N-Go handles to the vertical position. (you want the housing to “float” freely on the springs during operation)**
- 2. If you have the Lock-N-Go make sure the Rubber Floats are fully inserted in the float holder on the Cap. (Both sides)**
- 3. Make sure all switches are turned in the “OFF” position before plugging in the machine.**
- 4. With main switch still OFF, fill floss head 90% full with Flossugar provided. This 90% level is necessary to obtain a balanced condition in the floss head. DO NOT OVERFILL! Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.**
- 5. Turn Main Switch “ON”, wait 10 seconds and then turn Heat Switch “ON”.**
- 6. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.**
- 7. The machine should start making floss in about 30 seconds. When the unit starts making floss, you must reduce the heat setting. Turn the heat control knob counter clockwise to eliminate smoking.**
- 8. Once you find the ideal setting for the Heat Control, operate with the setting near the position each time.**
- 9. When the floss head needs to be refilled with sugar, or to stop the machin, turn the “HEAT” Switch OFF and allow the motor to runn for at least 1 minute to “cool down” the floss head, theyn turn the “MAIN” switch OFF.**

- 10. Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With light flicking action. Roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss (DO NOT roll floss while the cone is inside the pan)**
- 11. When finished making floss, run the floss head completely empty of sugar.**
- 12. Turn the heat control dial to the maximum position, and allow machine to run for approximately 3-4 minutes. This will burn any excess sugar out of the head and prevent any excess carbon build-up.**
- 13. Turn the heat switch “off” and allow the motor to run for 1-2 minutes to allow the floss head to “cool down”.**
- 14. Turn the motor switch off and allow the motor to come to a complete stop.**
- 15. NEVER put water in the floss head.**

**For any immediate problems, please call Judy on her cell – 201-906-9061**