



Valley Tent Rental L.L.C.

WWW.VALLEYTENT.COM * (201)-476-5666

SNO-KONE MACHINE

OPERATING INSTRUCTIONS

- 1. Use in a shaded area. Fill the hopper to within an inch of the top with ice cubes or block ice. Do not use any pieces larger than 3". The larger the cubes the better the snow.**
- 2. Switch motor on. Wait for the motor to come to full speed (about a minute)**
- 3. Push the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. You may find that you need to relieve the pressure two or three times in a cycle. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy. (Do not insert any objects into the hopper other than ice.)**
- 4. Scoop snow into cones. Apply syrup.**
- 5. Clean up. Just empty all snow from the machine and unplug. Valley Tent will clean and sanitize the machine.**

For any immediate problems, please call Judy on her cell – 201-906-9061