



Valley Tent Rental L.L.C.

www.valleytent.com (201)-476-5666

TENT HEATER

OPERATING INSTRUCTIONS

1. Make sure there is electrical power to the heater box.
2. Open valve on propane tank.
3. Turn switch on heater box to heat (up).
4. Turn on thermostat inside tent.

WHEN USING MULTIPLE PROPANE TANKS: (Long Term Rentals)

Use the tank that is marked use first

Do not open second tank until first tank is completely empty

Once the first tank is completely empty, close valve on the tank and then open valve on second tank

Once any tanks are empty have management contact emergency number at 551-427-3971 or 973-864-0750 so a replacement tank may be delivered

Trouble shooting: When we set up the heater in your tent it was tested and run for at least 10 minutes. Everything was working properly when we left. Sometimes a customer has difficulties with the heater operation. 99% of the time when the heater does not work it is one of the issues listed below.

If the heater does not turn on at all. Check and make sure that there is power to the heater. If there is a GFI switch between the heater and the outside receptacle of your house please hit the reset but on the GFI switch. Check thermostat and make sure black knob is turned on.

If the heater blows cold air. Check propane tank. Most likely it is either off or empty.

If the heater shuts down or stops blowing air. Most likely the air intake on the heater box (the grid on one end) is blocked or the diffuser (the air duct going into the tent) is blocked. Make sure that no items have been put in front of the air intake on the box or in front of the diffuser.

If you still have difficulties with the heater after following the above listed steps please call the emergency contact number 551-427-3971 or 973-864-0750.