



Valley Tent Rental L.L.C.

WWW.VALLEYTENT.COM * (201)-476-5666

TABLE TOP HOT DOG MACHINE

OPERATING INSTRUCTIONS

- 1. Place the unit on a flat stable surface.**
- 2. Fill the stainless steel well with approximately 1” or 4 quarts of water. Do not allow water level to go higher than this.**
- 3. Plug cord into a grounded outlet.**
- 4. Preheat the water in the well by covering the well with an empty food container or cover and set heat control knob to the maximum heat setting for the recommended time listed below.**
 - a. 15 minutes if well was filled with HOT water**
 - b. 25 minutes if well was filled with COLD water**
- 5. Place the stainless steel container of food into unit. Cover inset with lid. Do not overfill the food container.**
- 6. For the function of hot food handling, set the heat control knob to the desired setting.**
- 7. Periodically remove container and check water level. Add hot water if necessary.**