



Valley Tent Rental L.L.C.

WWW.VALLEYTENT.COM * (201)-476-5666

COTTON CANDY MACHINE

OPERATING INSTRUCTIONS

- 1. With main switch still OFF, fill floss head. Always fill it 90% full with sugar. This 90% level is necessary to obtain a balanced condition in the floss head. DO NOT OVERFILL! Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.**
- 2. Turn Main Switch and Heat Switch “ON”.**
- 3. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.**
- 4. The machine should start making floss in about 45 seconds. When the unit starts making floss, you must reduce the heat setting. Turn the heat control knob counter clockwise to eliminate smoking.**
- 5. Once you find the ideal setting for the Heat Control, operate with the setting near the position each time.**
- 6. When finished making floss, run the floss head completely empty of sugar.**
- 7. Turn the heat control dial to the maximum position, and allow machine to run for approximately 3-4 minutes. This will burn any excess sugar out of the head and prevent any excess carbon build-up.**
- 8. Turn the heat switch “off” and allow the motor to run for 1-2 minutes to allow the floss head to “cool down”.**
- 9. Turn the motor switch off and allow the motor to come to a complete stop.**